



Rescue Accident Assistance Ltd

No Hassle, No Fee, 100% Compensation

0845 299 7790

HOW TO CHANGE A TYRE

A STEP BY STEP GUIDE

Always make sure you have a fully inflated spare tyre, jack and wrench in your boot. Most new cars come with these already but always make sure.

1. Leave your car in gear to avoid the wheel from turning as you loosen the nuts.
2. Loosen but do not remove the lug nuts before you jack up the car so your wheel stays put.
3. Locate your jacking area (your book will show you where this is). **Do not** try to jack your car up anywhere other than with the jack on the correct jacking point. The car will collapse onto the jack or you could punch a hole through to the interior of the car.
4. Slowly jack up your car.
5. Fully remove the lug nuts, and slowly pull the wheel away from the vehicle.
6. Fix your spare tyre onto the wheel shaft.
7. Make sure you tighten the lug nuts.
8. Lower the jack and your vehicle is ready to go again!



REMEMBER

Some vehicles come with Temporary Spare Tyres that are narrower/lighter than the others or just intended to get you home. You must change your tyre ASAP or you could be fined.

FOR MORE INFORMATION ON TEMPORARY TYRES LOOK HERE:

www.bridgestone.com.au/tyres

FOR MORE INFORMATION ON REGULATIONS ON TEMPORARY SPARES LOOK HERE:

www.nopenaltypoints.co.uk/SpareTyres.

Disclaimer: Rescue Accident Assistance Ltd provides this information as a guide only and accept no liability therein.

100% COMPENSATION – NO FEES PAYABLE BY YOU WIN OR LOSE – SIMPLE PROCESS

www.rescueaccidentassistance.com